

INSTRUCTIONS

Door can be installed with door in jamb and may be closed. (Latch stop does not need to be removed until the door is fully installed.)

1 Install one **Quick Plumb Door Hanger** behind the center of each hinge with 1/2" screws (included) facing the side of door that the door opens in (FIG A). Install the other three **Quick Plumb Door Hangers** directly across from the hinges on the opposite side of the door (FIG B).


2 Draw a plumb line approximately 1/2" in from rough opening on hinge side of the door.

3 Place the door into the rough opening and line up a reference slot with the plumb line on hinge side of door (FIG C). Screw through the slot into trimmer stud using standard drywall screws. Check the reveal on both the latch side and on top of the door and screw through the remaining **Quick Plumb Door Hanger** making sure the reveal stays the same from top of the door to the bottom (FIG D).


QUICK PLUMB DOOR HANGER




Lets you easily install perfectly straight doors – in less than quarter of the time of traditional methods!

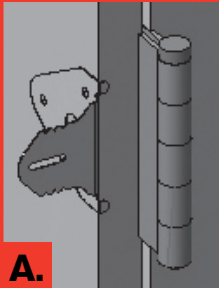


A.

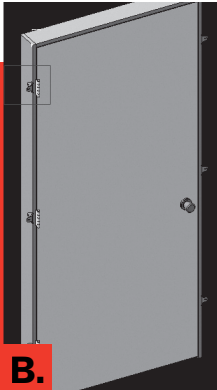

B.

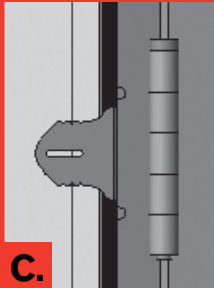

C.

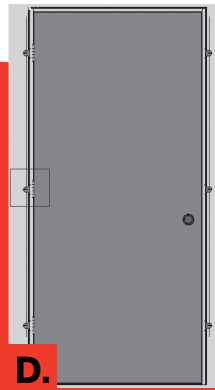

D.

EXPRESS 
PRODUCTS

www.expressproduct.com

**HANG 'EM FAST.
HANG 'EM TRUE.**